




How to change a rocker switch

BETA MAXI/ MINI

Replacement/ removal of rocker switch

- N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply
1. Remove pin from pressure handwheel using 4 mm punch (pic 1)
 2. Unscrew handwheel anti clockwise from adjusting stud (pic 2)
 3. Remove the two socket head screws (front and side) holding the instrument cover, with 4 mm Allen key (pic 3)
 4. Lift up instrument cover from the back of press (pic 4)
 5. Disconnect wires connected to rocker switch taking note of the connections for future reference when reinstalling (pic 4 arrow-a)
 6. Push rocker switch out of opening in instrument cover

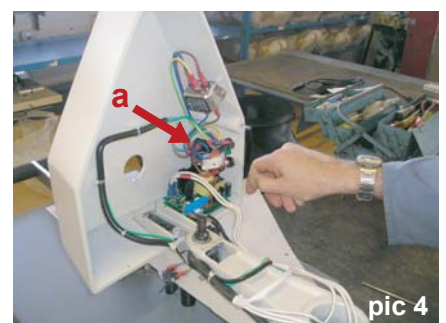

Re-installation of rocker switch

1. Installation is a reversal of removal