




ADKINS
HEAT PRESS TECHNOLOGY

Technical Support

How to recalibrate a newer controller

STUDIO AUTO CLAM SENIOR/ JUNIOR PRESS

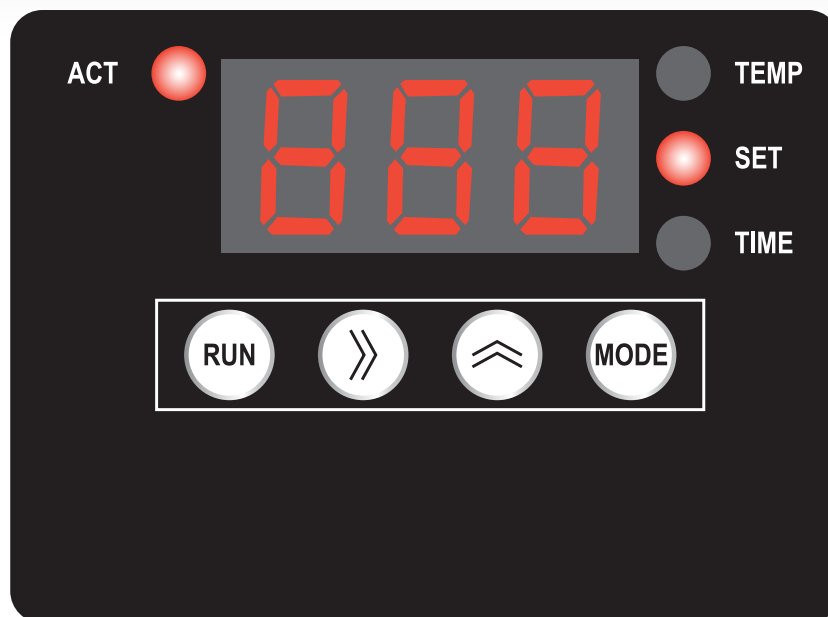

1. Press the » and ⤴ up arrow buttons alternately to the count of 5.
2. “ADJ” will appear on the display and flash once; it will then display the temperature to be changed.
3. To change the temperature press either the ⤴ or » buttons.
Once the temperature has been revised the display will flash 5
4. times and then show the temperature.
5. When the set time has been reached, the display will flash.
Press the mode button 3 times to stop the flashing, after this the press is ready to use.

If after following this technical support document you require any further assistance, please open a support ticket using this link: <https://aadkins.com/technical-support/> and a member of our technical team will contact you

All products within the ADKINS range are labelled with CE marking and are manufactured and tested to comply with EC safety regulations.