




ADKINS
HEAT PRESS TECHNOLOGY

Technical Support

How to recalibrate a controller

STUDIO CAP/ POCKET COMBO

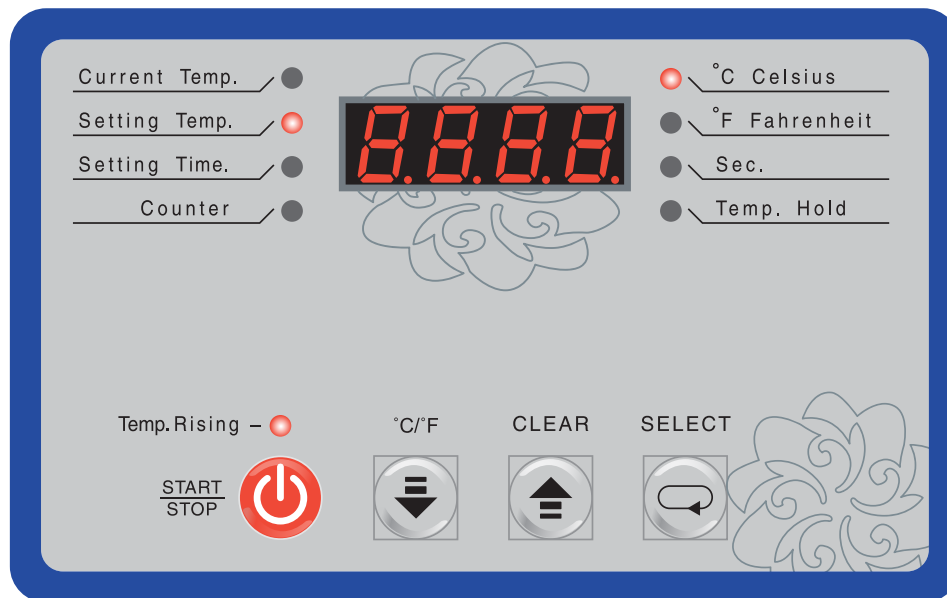

1. Press and hold the select button, for approx. 3 seconds, or until PA-0 flashes alternately on the display.
2. Press the clear/up button 3 times until PA-3 flashes alternately on the display.
3. Press the select button 2 times until tc-0, or another number flashes alternately on the display.
4. Adjust the number that is on the display next to tc- with either the up or down buttons, to adjust the offset temperature with the calibration meter reading.
5. Press the select button and hold it until the current temperature LED shows on the display. This will now have locked your new setting.
6. Recheck your temperature with the calibration meter and if needed repeat the above procedure until you are happy with the temperature reading on the calibration meter.

If after following this technical support document you require any further assistance, please open a support ticket using this link: <https://aadkins.com/technical-support/> and a member of our technical team will contact you

All products within the ADKINS range are labelled with CE marking and are manufactured and tested to comply with EC safety regulations.