




ADKINS
HEAT PRESS TECHNOLOGY

Technical Support

How to recalibrate an older controller

STUDIO AUTO CLAM SENIOR/ JUNIOR PRESS

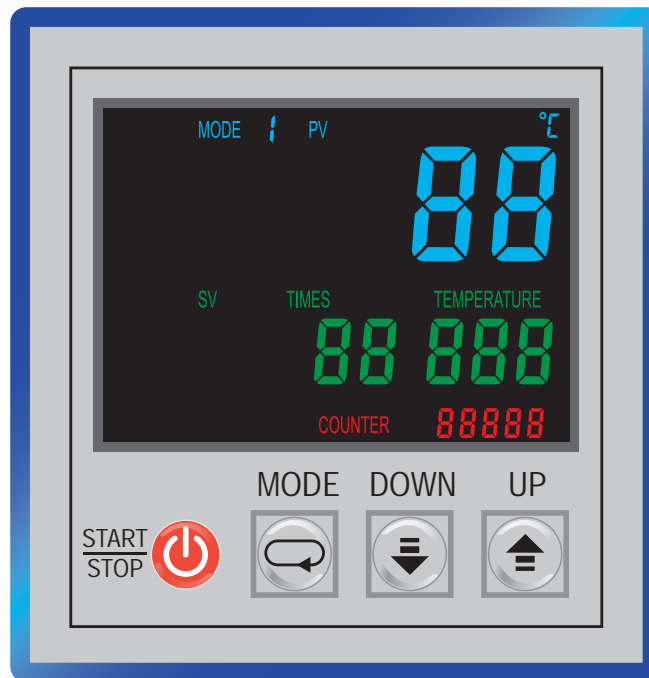

1. Press and hold mode button until the time flashes.
2. Press again for the temperature.
3. Press again for the counter.
4. Press again for AH.
5. Press again for RE, using either the up or down buttons, adjust the off set temperature on the controller display until it matches the calibration meter.
6. When you have finished adjusting the off set temperature, press and hold the mode button until the display returns to normal.

If after following this technical support document you require any further assistance, please open a support ticket using this link: <https://aadkins.com/technical-support/> and a member of our technical team will contact you

All products within the ADKINS range are labelled with CE marking and are manufactured and tested to comply with EC safety regulations.