





## How to change a green button controller

## BETA CAP/ POCKET COMBO

### Replacement/ removal of controller

**N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Remove four screws from base board (pic 1)
2. Remove base board from casting
3. Remove all wires from controller (pic 2), taking note of the position of all connections for future reference when reinstalling
4. Remove four screws securing fascia, then lift fascia from casting (pic 3)
5. Remove two screws securing controller (pic2 arrow-a), taking note of screws and spacer positions for future reference when reinstalling
6. Lift controller from casting

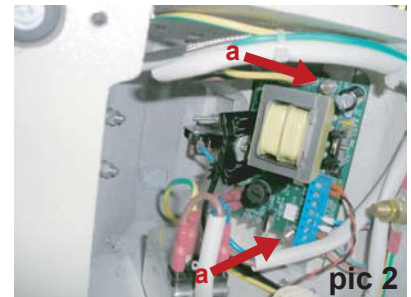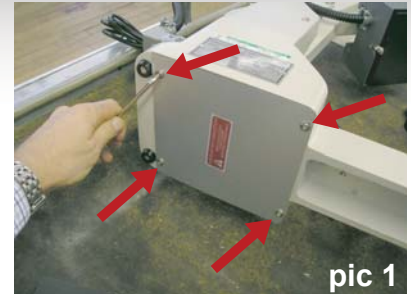

### Re-installation of replacement controller

1. Installation is a reversal of removal

